


Santa Cruz Light Wells, Inc.
Light Pick™ Light Show
User's Manual

Welcome to the Light Pick™

Playing the guitar will never be the same again. The Light Pick™ creates a dynamic interaction between performer, instrument and audience. The Light Pick™ uses state-of-the-art technology and materials designed to enhance player performance and comfort.

Light Pick™ Overview

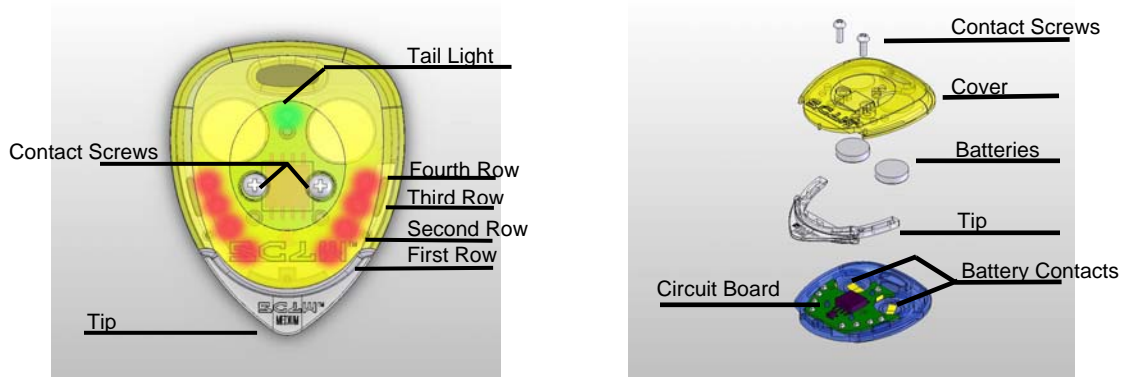

The Light Pick™ consists of a tip, four rows of light displays, two contact screws, and a tail light.

Battery Installation/Replacement


To replace or install the Light Pick™ batteries:

1. Unscrew the two contact screws and remove the cover gently.
2. Remove the old batteries, if any, carefully without disturbing the circuit board. Place an Energizer® 362/361 battery in each of the two holders.
3. Once the batteries are in place, align the cover with the body and screw it into place without over-tightening the contact screws.
4. You may reset your Light Pick™ at any time by removing and re-installing the batteries


Configuring the Light Pick™

The Light Pick™ has two modes of operation, ON and OFF.

1. To turn On, touch the Light Pick™ contact screws gently. The contact screws not only secure the pick cover to the base, but also complete the circuit when tapped.

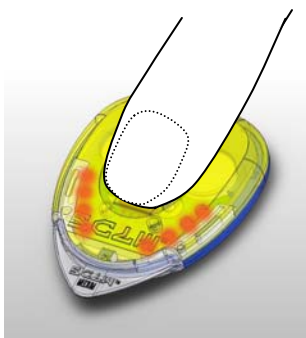

Tap/Press

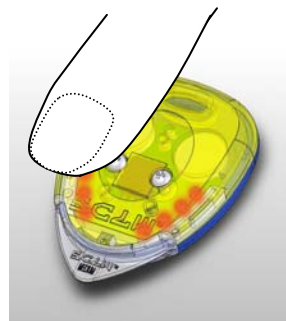

Release

2. To turn OFF the Light Pick™, just set it down or take your thumb off the screws.

Tip Installation/Replacement

We recommend that you replace the tip often for optimal sound and performance. Tips are available for purchase through our website: <http://www.SCLW.net>. Tips are available in light, medium, heavy, and extra heavy gauges.

To replace or install the tip:

1. Unscrew the two contact screws and remove the cover gently.
2. If you are replacing the tip, remove the old one carefully without disturbing the batteries or the circuit board.
3. Place the new tip Light Pick™ in the base with the SCLW™ logo face down by aligning the small, circular openings, located in the tip's two extension arms, with the small pegs located in the base. Snap it into place.
4. Once the tip is in place, align the cover with the body and screw it into place without over-tightening the contact screws.

Care for Your Light Pick™

Proper care for your Light Pick™ ensures that it will continue to function properly. The following guidelines are recommended:

- Handle the circuit board with care and do not bend. See the warnings and instructions on avoiding electrostatic discharge.
- Cleaning your hands before use, and wiping the heads of the contact screws can improve the touch-response and operation of the Light Pick™.
- Change the tip often for optimal sound and performance.
- Keep the Light Pick™ stored in a cool dry place.

Trouble-Shooting

1. In the event that the Light Pick™ fails to start, try any or some of the following steps:
 - Clean your hands or slightly dampen your fingers with water before use.
 - Make sure the batteries are properly in place and that the cover is properly aligned with and secured to the base.
 - Clean or wipe the heads of the contact screws.
 - Change the batteries.
2. If the casing cracks or the Light Pick™ is otherwise physically damaged, visit our website for more information about replacing damaged parts: www.sclw.net

Limited Warranties

Please see limited warranty policy on website at www.sclw.net.

Warnings

⚠ KEEP OUT OF REACH OF CHILDREN – CHOKING HAZARD; SMALL PARTS. Small children should not handle the Light Pick™ or its parts without proper adult supervision.

⚡ AVOID ELECTROSTATIC DISCHARGE (ESD). Static electricity builds up on your body as you walk around. You experience an electrostatic discharge (ESD) when you touch an object and feel a shock or see a spark. ESD can cause damage to the Light Pick's™ circuit board. To avoid ESD when touching the circuit board, you can wear an anti-static wristband, available at most electronics stores. If you do not have a wristband, touch a grounded, unpainted or bare metal surface before handling the circuit board.

Contact Us

Santa Cruz Light Wells, Inc.
335 Pennsylvania Ave
Santa Cruz, CA 95062
831-429-8437
Service@sclw.net
<http://www.sclw.net>